
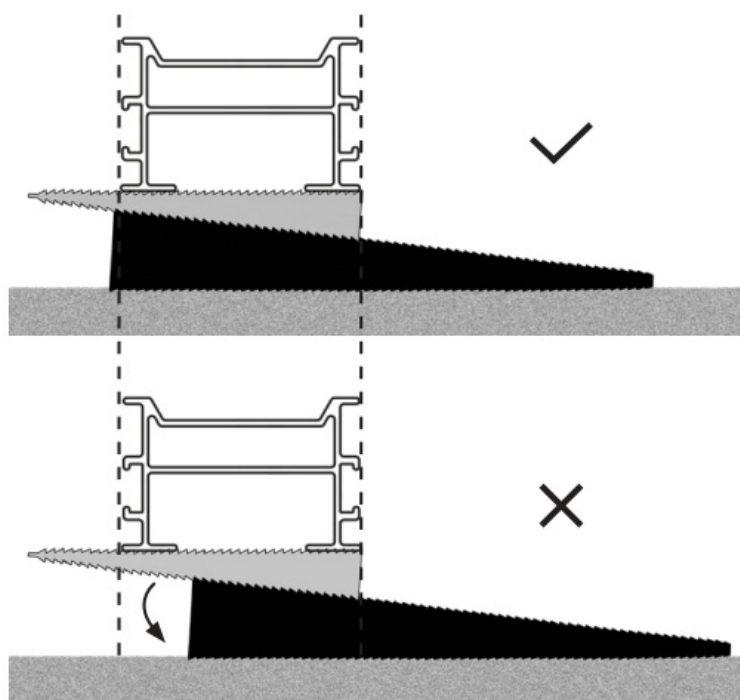


# DECKING WEDGES

## INSTALLATION GUIDE

For decking subframes that are too low for pedestals but still require slight levelling adjustments, our Decking Wedges provide the perfect solution.

By combining two Wedges, you can compensate for height differences ranging from 6mm to 40mm.

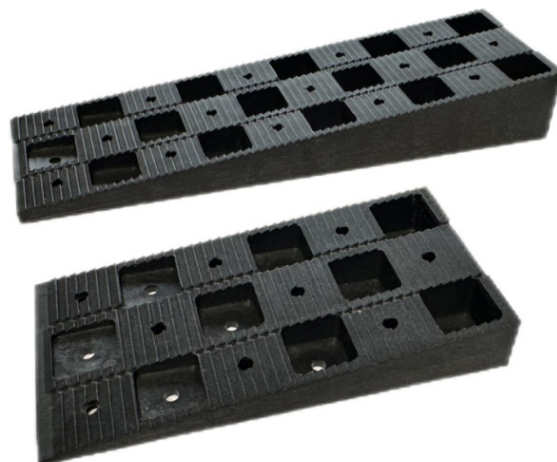

### INSTALLATION INSTRUCTIONS

1. Use the table below to select the correct combination of Wedges to achieved the desired height compensation.
2. Place one wedge on top of another - ensuring the teeth are firmly engaged so the connection is 'locked'.
3. Place the joist on top of the wedges - ensuring its outer edge is parallel with the outer edge of the lower wedge as per the top picture in the adjacent diagram. The joist should not overhang (see bottom picture opposite).

### WEDGE COMBINATIONS HEIGHT TABLE

Wedge Combination	Height
Small + Small	6mm-22mm
Small + Large	12mm-30mm
Large + Large	12mm-40mm